


## WiseUp SEPARATION ALARM

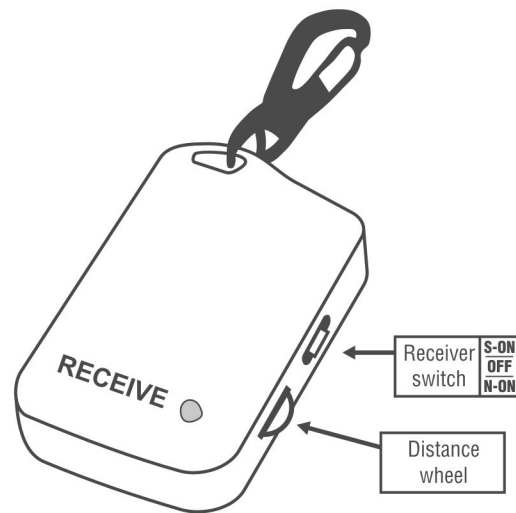

### Install Battery

Slide down the battery cover on the back of the Receiver and pull out the tab to now allow battery power to flow. The Transmitter is already active with a long-life battery.

### To Use

- Turn the Receiver switch to "N-ON" (normal function) located on the side (switch markings on back). Receiver will emit an alarm (Beep, Beep)
- Turn the Distance Wheel on the Receiver to the lowest distance by turning the wheel downward.
- Turn the Transmitter switch to "On" and straighten the black string (loop) on the Transmitter, which is the antenna.
- Put the two devices side by side, you may hear another Beep and then silence – which means the two devices are now communicating.

### Set Distance

You can adjust the distance by turning the Distance Wheel up and down – (turn dial downward direction to 1 foot and turn dial up to 40 feet, with relative distances in-between).

### Separation Alarm (N-ON)

When the Transmitter walks away from the Receiver, the Receiver will Beep and Vibrate continuously (when the distance between the two devices exceeds the distance set on the dial).

### Searching Function (S-ON)

We suggest the user to use "N-ON" as the default function. Only set to S-ON function when the Transmitter/object is lost. You can locate it by following these steps:

- Turn the Wheel upward to the longest distance. Search until the Receiver's alarm is activated (beeps) – you are now within 40 feet of your Transmitter.
- Turn the Wheel down to a shorter distance until the Receiver is silent again.
- Remember where you are standing now and then walk in different directions (from that position) until you hear the Receiver's alarm again – you are now getting closer to the Transmitter.
- Repeat until you locate the Transmitter.